

## Castle Dishwasher Instructions:

1. Push the **ON button** to start the water heating.
  - a) Water must reach 164 degrees to wash dishes.
  
2. Load dirty dishes in plastic racks and load one at a time.
  - a) Lay any silverware flat in racks.
  - b) Stand dishes, mugs, pots, and pans.
  
3. Place load into the dishwasher and push the **WASH button**.
  
4. Wait until cycle is complete (about 2 minutes) then load next rack.
  - a) Stack and let the dishes air dry; please do not wipe.